

Description

LED expansion card for **TELEDATAONE** fire control panel.

ONE56 is installed below the control panel display; LEDs lighting shows alarm condition of monitored areas.

— ZONE 1	— ZONE 2	— ZONE 3	— ZONE 4	— ZONE 5	— ZONE 6	— ZONE 7	— ZONE 8
— ZONE 9	— ZONE 10	— ZONE 11	— ZONE 12	— ZONE 13	— ZONE 14	— ZONE 15	— ZONE 16
— ZONE 17	— ZONE 18	— ZONE 19	— ZONE 20	— ZONE 21	— ZONE 22	— ZONE 23	— ZONE 24
— ZONE 25	— ZONE 26	— ZONE 27	— ZONE 28	— ZONE 29	— ZONE 30	— ZONE 31	— ZONE 32
— ZONE 33	— ZONE 34	— ZONE 35	— ZONE 36	— ZONE 37	— ZONE 38	— ZONE 39	— ZONE 40
— ZONE 41	— ZONE 42	— ZONE 43	— ZONE 44	— ZONE 45	— ZONE 46	— ZONE 47	— ZONE 48
— ZONE 49	— ZONE 50	— ZONE 51	— ZONE 52	— ZONE 53	— ZONE 54	— ZONE 55	— ZONE 56

Dati tecnici

Power supply	From the control panel
Dimensions	219 x 58 mm
Number of LEDs (displayed areas)	56
LED colour	Rosso
Installation	Sulla centrale, con collegamento alla scheda master
Environmental conditions	From +5° to +40°C (operating temperature) Da -40° a +70°C (storage temperature)

