

Description

ONEDETECTOR1X_AP continuously samples the air condition of the protected area earliest warning of fire and yet offers a high level of false alarm rejection. The ONEPROTOCOLL employed by the monitoring control panel provides high rates of information.

ONEDETECTOR1X_AP benefits from a periods between maintenance without compromising sensitivity of response.

ONEDETECTOR1X_AP must only be connected to control panels that use the ONEPROTOCOLL proprietary analogue intelligent addressable communication protocol. The address can be programmed by mean of the ONEPROGRAMMER function of Teledata smoke detection panels.


ONEDETECTOR1X_AP is provided with tools for base numbering and locking pin against unwanted removal.

Technical Specifications

Power supply *	27V
Average standby current consumption	90 uA @ 27 V
Remote output max current consumption (externally limited)	15 mA
Operating temperature range	-30 °C / +70 °C (no icing)
Humidity	95% RH (no condensation)
Height (standard base included)	48 mm
Diameter	92 mm
Weight (standard base included)	120 g

Features

- Low profile optical smoke detector to be combined with ONEBASE
- Built with ABS plastic material with stabilized Modern and compact design, low aesthetical
- Integrated self adapting function, to suit enviromental changes
- Remote LED control option

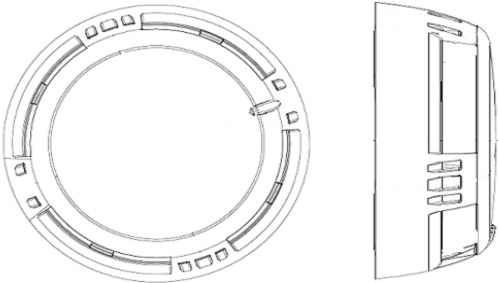

Installation

This photo detector must be used in combination with compatible controlpanels employing the ONEPROTOCOLL communication protocol ONEDETECTOR1X_AP must be mounted on ONEBASE. ONEBASE supplied with a metal shorting spring installed between the two negative terminals and permits the continuity of the loop cabling to be tested after installation. Connections to the ONEBASE terminals are polarity sensitive,please check the wiring diagram in figure 2


Remote Output Capability

Remote output capability is available as a standard feature so a remote indication lamp or a compatible platform sounder (check power requirements) may be wired to the base terminals.

If other equipment is connected to the remote output, its supply current must be eventually limited by using an adequate resistor. Consult the TECHNICAL SPECIFICATIONS table and assess the external device current absorption's value.

Setting The Address

ONEDETECTOR1X_AP can be addressed using a special hand-held programmer unit "ONEPROGRAMMER". Addresses may be selected from a range from1 to 240.

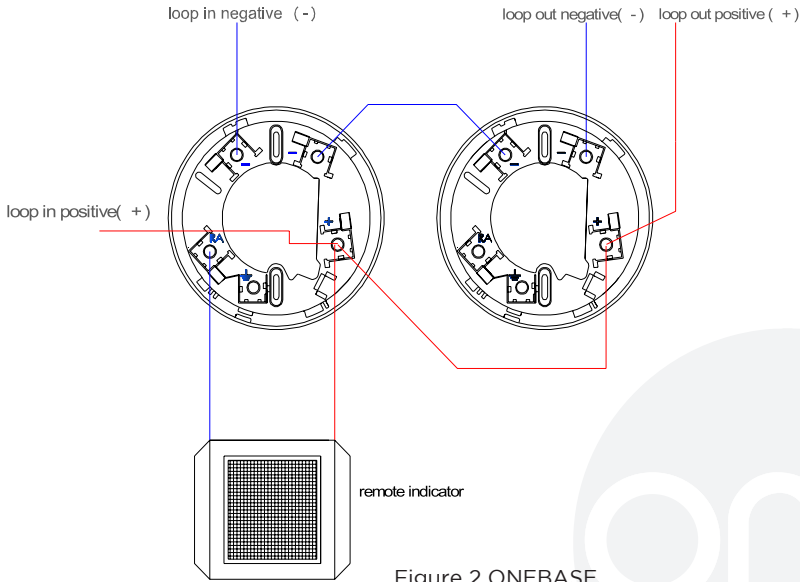

Sensitivity Settings

A choice of four sensitivity levels are available by control panel selection. Level1 is most sensitive, level 4 is least sensitive.

ONEDETECTOR Mounting

1. Position ONEDETECTOR1X_AP centrally on it's ONEBASE
2. Rotate clockwise, ONEDETECTOR1X_AP will drop into its keyed location
3. Press more firmly to win the force of the contact springs
4. Continue to rotate a few degrees until the ONEDETECTOR1X_AP has fully engaged in the ONEBASE. (fig3) Figure 3
5. Verify the alignment between the ONEDETECTOR1X_AP and the raised reference marks on the ONEBASE.(Fig4)
6. Test ONEDETECTOR1X_AP as described in the section TESTING

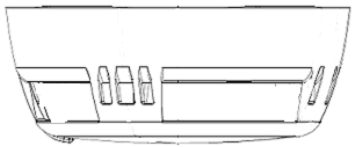


Figure 3

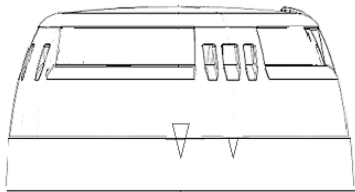


Figure 4

Mechanical Block Feature

ONEDETECTOR1X_AP can be locked on ONEBASE by removing the small plastic pin and then inserting it in the appropriate slot on the side of ONEBASE, see figure 5 part 1 and part 3.

To unlock the ONEDETECTOR1X_AP from its ONEBASE, simply push the inserted pin towards the inside of the ONEBASE using a small screwdrive.

In ONEBASE there is also a detachable label to be inserted outside the ONEBASE to identify the loop number and the sensor address,see figure 5 part 2.

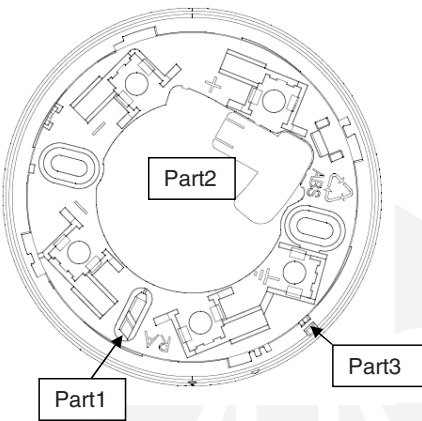


Figure 5

Testing

ONEDETECTOR1X_AP can be tested after installation and during maintenance using the aerosol test. for this test, approved aerosols should be used to prevent damage and possible contamination of the sensor. Teledata suggests using the special applicator to spray the aerosol. ONEDETECTOR1X_AP will send an alarm message to the control panel. if ONEDETECTOR1X_AP does not respond correctly to the test, it may be necessary to clean it, in this case the instructions in the maintenance chapter must be followed.

Maintenance

Remove ONEDETECTOR1X_AP from its mounting ONEBASE,inspect the smoke entry windows and use a small, soft bristle brush to dislodge any evident contaminants such as insects, hair ,ecc. use a small vacuum tube or clean,dry and compressed air to suck up or blow away any remaining small particles from the smoke entry screen area. use ONEPROGRAMMER unit to read the percentage of dirt in the optical chamber ,please refer to the ONEPROGRAMMER instruction manual. Repositioned ONEDETECTOR1X_AP on your mounting ONEBASE and check correct operation as described under the testing paragraph.

Warnings And Limitations

Our devices use high quality electronic components and plastic materials that are highly resistant to environmental deterioration. However, after 10 years of continuous operation, it is advisable to replace the devices in order to minimize the risk of reduced performance caused by external factors. Ensure that this device is only used with compatible control panels. Detection systems must be checked, serviced and maintained on a regular basis to confirm correct operation.

Smoke sensors may respond differently to various kinds of smoke particles, thus application advice should be sought for special risks. Sensors cannot respond correctly if barriers exist between them and the fire location and may be affected by special environmental conditions. Refer to and follow national codes of practice and other internationally recognized fire engineering standards.

Appropriate risk assessment should be carried out initially to determine correct design criteria and updated periodically.

Warranty

This warranty is invalidated by mechanical or electrical damage caused in the field by incorrect handling or usage.

Product must be returned via your authorized supplier for repair or replacement together with full information on any problem identified.

Full details on our warranty and product's returns policy can be obtained upon request



TELEDATA S.R.L.
Via Brescia 24 G
20063
Cernusco S.N.
Milano

EN 54-7
ONEDETECTOR1X_AP
0370-CPR-XXXX