


Description

ONEDETECTOR2_AP ensures the analysis of the air temperature false alarm. Each detector is provided with an integrated isolator circuit, need. The ONEPROTOCOL employed by the monitoring control panel provides high rates of information.

ONEDETECTOR2_AP must only be connected to control panels that use the ONEPROTOCOL proprietary analogue intelligent addressable communication protocol. ONEDETECTOR2 can work with two configuration settings: the first as FIXED with threshold at 78°C, the second one as Rate of Rise (ROR) with threshold at 58°C. The configuration can be done with ONEPROGRAMMER_AP. The address can be programmed using the ONEPROGRAMMER_AP tool.

ONEDETECTOR2_AP is provided with tools for base numbering and locking pin against unwanted removal.

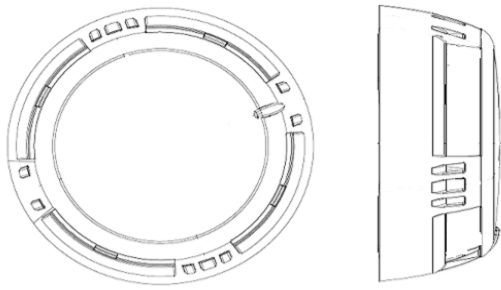

Features

- Low profile thermal and thermovelocimetric detector to be combined with ONEBASE_AP
- Built with ABS plastic material with stabilized UV
- Modern and compact design, low aesthetical impact
- Integrated self adapting function, to suit environmental changes
- Remote LED control option

Technical Specifications

| | |
|-----------------------------|--------------------------|
| Supply voltage range | 18 - 27V |
| Stand by consumption | 190µA |
| Alarm consumption | 6 mA (LED on) |
| Remote output max current | 15 mA |
| Operating temperature range | -30°C - +70°C |
| Humidity | 95% RH (no condensation) |
| Height with standard base | 48 mm |
| Diameter | 92 mm |
| Weight with standard base | 120 g |

Short Circuit Isolator

All standard series devices are provided with short-circuit monitoring isolators on the intelligent loop's line and can be activated by the control panel.

Installation

This ONEDETECTOR2_AP must be used in combination with compatible control panels employing the ONEPROTOCOL communication protocol.

ONEDETECTOR2_AP must be mounted on ONEBASE_AP.

ONEBASE_AP supplied with a metal shorting spring installed between the two negative terminals and permits the continuity of the loop cabling to be tested after installation.

Connections to the ONEBASE_AP terminals are polarity sensitive, please check the wiring diagram in figure 2.


Remote Output Capability

Remote output capability is available as a standard feature so a remote indication lamp or a compatible platform sounder (check power requirements) may be wired to the base terminals.

If other equipment is connected to the remote output, its supply current must be eventually limited by using an adequate resistor. Consult the TECHNICAL SPECIFICATIONS table and assess the external device current absorption's value.

Setting The Address

ONEDETECTOR2_AP can be addressed using a special hand-held programmer unit 'ONEPROGRAMMER_AP'. Addresses may be selected from a range from 1 to 240.

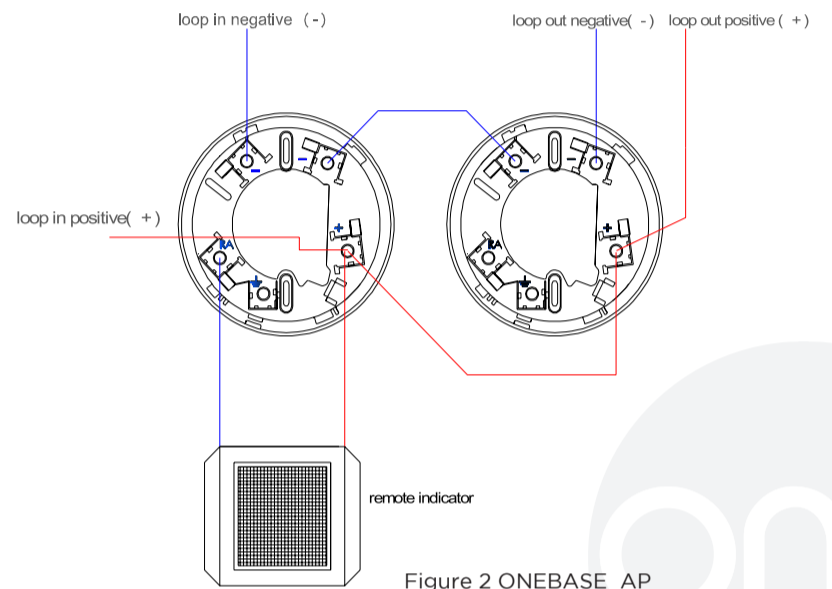

ONEDETECTOR2_AP Mounting

1. Position ONEDETECTOR2_AP centrally on it's ONEBASE_AP
2. Rotate clockwise, ONEDETECTOR2_AP will drop into its keyed location
3. Press more firmly to win the force of the contact springs
4. Continue to rotate a few degrees until the ONEDETECTOR2_AP has fully engaged in the ONEBASE_AP. (fig3)
5. Verify the alignment between the ONEDETECTOR2_AP and the raised reference marks on the ONEBASE_AP.(Fig4)
6. Test ONEDETECTOR2_AP as described in the section TESTING

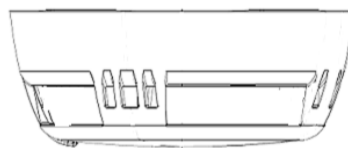


Figure 3

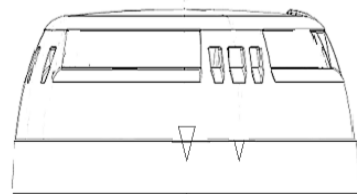



Figure 4

Mechanical Block Feature

ONEDETECTOR2_AP can be locked on ONEBASE_AP by removing the small plastic pin and then inserting it in the appropriate slot on the side of ONEBASE_AP, see figure 5 part 1 and part 3.

To unlock the ONEDETECTOR2_AP from its ONEBASE_AP, simply push the inserted pin towards the inside of the ONEBASE_AP using a small screwdriver.

In ONEBASE_AP there is also a detachable label to be inserted outside the ONEBASE_AP to identify the loop number and the sensor address, see figure 5 part 2.

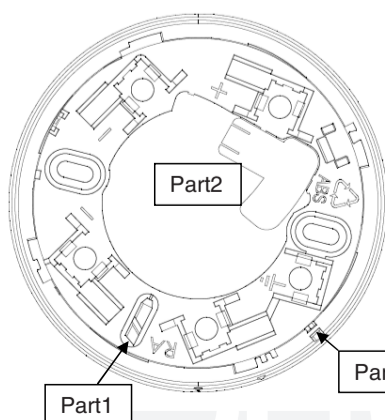


Figure 5

Testing

ONEDETECTOR2_AP can be tested after installation and during maintenance.

Use a hair dryer or a heat tool from an approved manufacturer. Direct the heat towards the sensor from its side. Hold the heat source at about 15 cm away from the sensor in order to prevent damage to its cover during testing.

ONEDETECTOR2_AP will send an alarm message to the control panel.

Maintenance

Remove ONEDETECTOR2_AP from its mounting ONEBASE_AP. Inspect the thermistor area and use a small, soft bristle brush to dislodge any evident contaminants ecc. Use a small vacuum tube or clean dry and compressed air to suck up or blow away any remaining small particles from the thermistor area.

Reposition ONEDETECTOR2_AP on your mounting ONEBASE_AP and check correct operation as described under the testing paragraph.

Warnings And Limitations

Our devices use high quality electronic components and plastic materials that are highly resistant to environmental deterioration. However, after 10 years of continuous operation, it is advisable to replace the devices in order to minimize the risk of reduced performance caused by external factors. Ensure that this device is only used with compatible control panels. Detection systems must be checked, serviced and maintained on a regular basis to confirm correct operation.

Smoke sensors may respond differently to various kinds of smoke particles, thus application advice should be sought for special risks. Sensors cannot respond correctly if barriers exist between them and the fire location and may be affected by special environmental conditions. Refer to and follow national codes of practice and other internationally recognized fire engineering standards.

Appropriate risk assessment should be carried out initially to determine correct design criteria and updated periodically.

Warranty

This warranty is invalidated by mechanical or electrical damage caused in the field by incorrect handling or usage.

Product must be returned via your authorized supplier for repair or replacement together with full information on any problem identified.

Full details on our warranty and product's returns policy can be obtained upon request



TELEDATA S.R.L.
Via Brescia 24 G
20063
Cernusco S.N.
Milano

EN 54-5
EN 54-17
ONEDETECTOR2_AP
0370-CPR-3640